

Caution

- Disconnect positive battery terminal before installing.
- ► Consult marine electrical professinal for proper wiring application.


Installation


- Refer to the latest edition of NFPA 302 and/or ABYC E11 Standard for installation information.
- ► Attach one 4/OAWG cable per terminal to meet ratings.
- ▶ Battery cable terminals must be attached under nut and lock washer. Torque 120in-lb (13.56 N•m).

Operation

- ► Turn all appliances o before turning the battery switch to OFF.
- ▶ Do not switch to OFF while engine is running.

Dimension

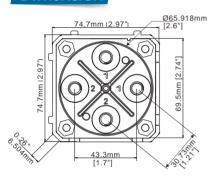


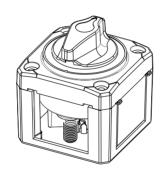

Parts# 9800-010-X


Color: 9800-010-10 (Panel), 9800-010-11 (Surface)


Continuous Rating	300AmpsDC
Intermittent Rating	450AmpsDC 5min.
Cranking Rating	675 Amps DC 30 sec.
Maximum Voltage	32 Volts DC
Switch Operating	-22°F to 284°F
Mounting	Surface / Front , Rear Panel
Cable Size	4/OAWG (120mm²)
Standard	meet S.A.E. J1625,J1171,ABYC E-11
	UL1500 (Ignition protection)
Stud size	2pcs 3/8"-16
Torque rating	120in-lb (13.56Nm) max.
Studs and Nuts	Copper with Tin plated

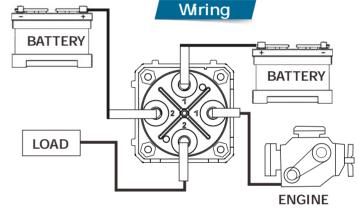


m [0.15"]

Mounting Holes

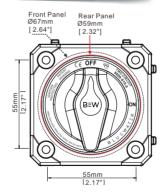

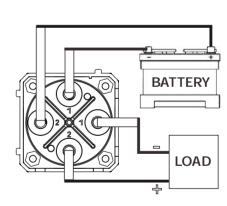

Mounting

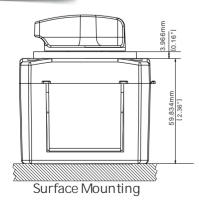

43.3mm [1.7"]

